

ASSEMBLY INSTRUCTIONS

6ft Value Half Wall Frame, Half Growhouse

CONTENTS

Main aluminium parts	P1
End sections	P2
Adding the long rails	P3
End plates	P4
Centre legs	P5
Squaring & fixing	P6
Wall & floor problems (SW3)	P7
Fitting the back rails (SB3)	P8
Fitting the infill plate (SB3)	P9
Ground Fixing (SB3)	P10
Shelving	P11
Fitting liner	P12
Fitting handles	P13
Fitting glass	P14
Troubleshooting	P15
Notes on using the frame	P16

Please keep all packaging
until installation is complete



Model SW3 shown



Model SB3 shown

Video instructions:

Helpful video clips are available at
www.garden-products.co.uk/instructions

Can we improve?

We hope that you find our
instructions clear and concise.
If you have any suggestions for
improvements email:

instructionfeedback@garden-products.co.uk

Access Garden Products
Crick
NORTHAMPTON
NN6 7XS

Tel: 01788 822301
Fax: 01788 824256
sales@garden-products.co.uk
www.garden-products.co.uk

Assembly instructions for models: SW3 (6ft Half Wall Frame)
SB3 (6ft Half Growhouse)

Date: Sep 26 Rev 9 File: SWB3




Top leg




Back Leg




Front Leg

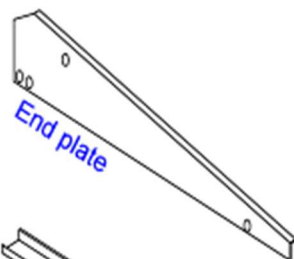

End plate

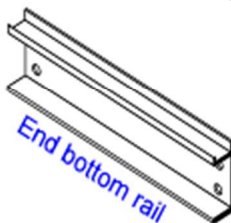


End bottom rail

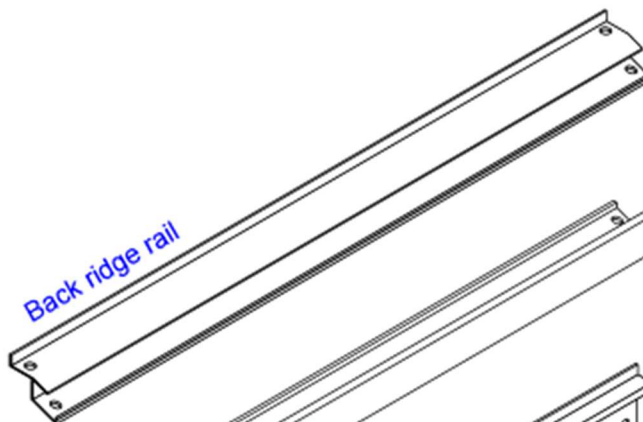

Back ridge rail



Front top rail

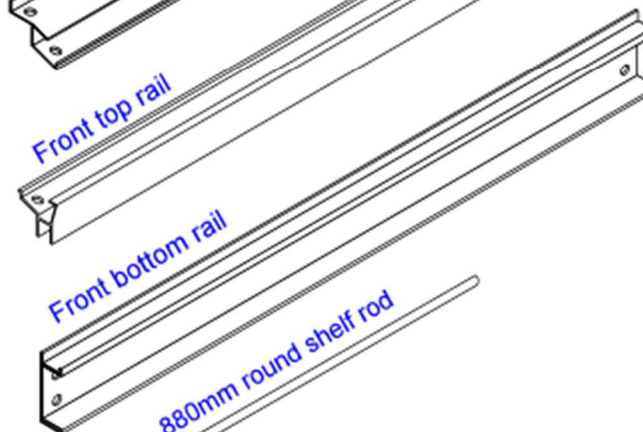

Front bottom rail



880mm round shelf rod

Glass bracket

Infill plate



Back bottom rail

**Back Parts
GROWHOUSE
ONLY**

Back Parts	SB3
Glass bracket	2
914mm Infill plate	2
Back bottom rail	1

Leg parts	SW3/SB3
Back leg	3
Front leg	3
Top leg	3

End parts	SW3/SB3
End plate	2
Kick rail	2

Front parts	SW3/SB3
Ridge rail	1
Top rail	1
Bottom rail	1
880mm shelf rod	10

Additional Items		SW3	SB3
Handle 585mm		6	6
Screw pack	SCREW-H4	1	1
Screw pack	SCREW-H10	0	1
Shelf pack	S-V	2	2
Black 12mm channel liner	W65-5M	1	1
Black 16mm channel liner	W66-2M	1	1
Allen Key	SCREW-H4	1	1



Powder Coated models only


These have washers supplied to protect the coating - refer to instructions in washer pack




Top leg rests against the **FLAT FACE** of back leg—it is not bolted to the back leg



Back leg the wrong way round

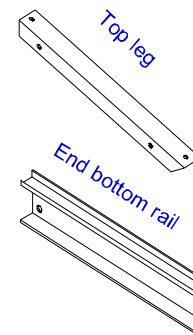

Back leg

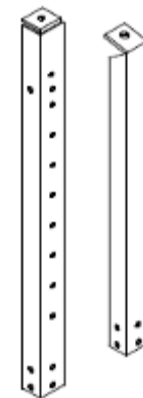


Front leg

YOU ALSO NEED:


10mm BOLTS	4
NUTS	4
Located in pack: SCREW-H4	

PARTS NEEDED FOR EACH END

- 1 Make up the LEFT hand end as shown.
- 2 Make up the RIGHT hand end as shown

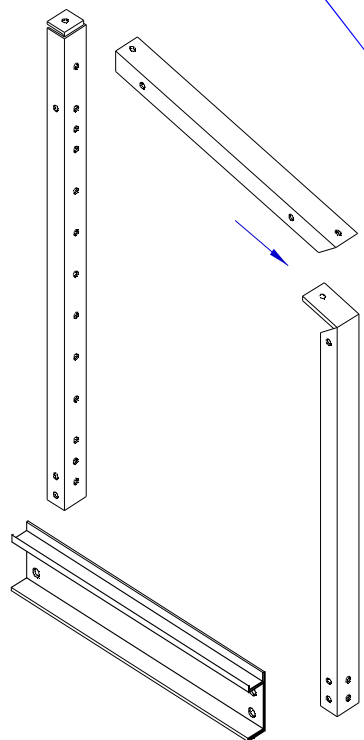


EXPLODED VIEW

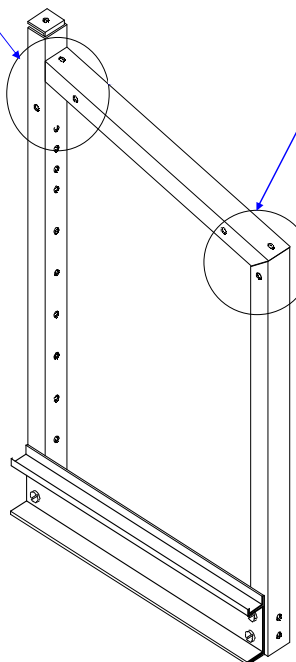

FINISHED LEFT HAND END



Slide the tongue of the front leg into the groove on the top leg.

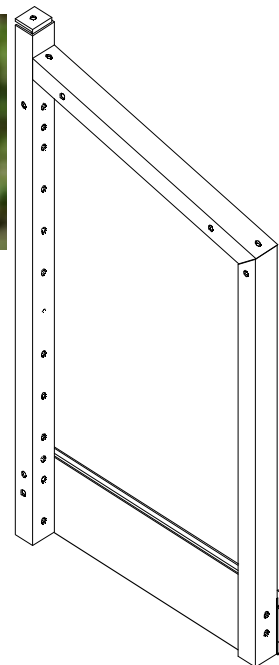

FINISHED RIGHT HAND END

DO NOT FULLY TIGHTEN BOLTS AT THIS STAGE


END SECTIONS



FIXING DETAIL




FIXING DETAIL

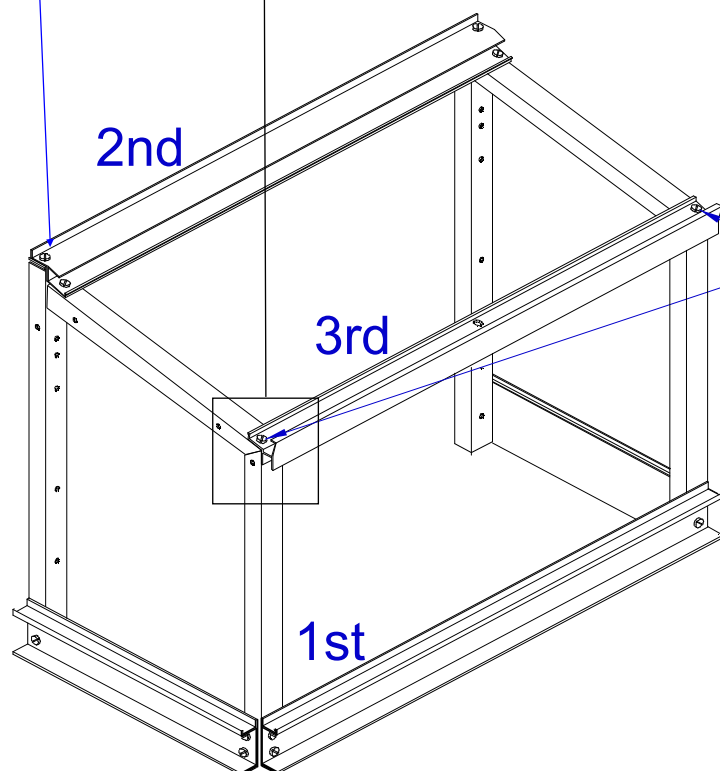

USE THE TWO 20MM
BOLTS WITH THIS RAIL




PARTS NEEDED

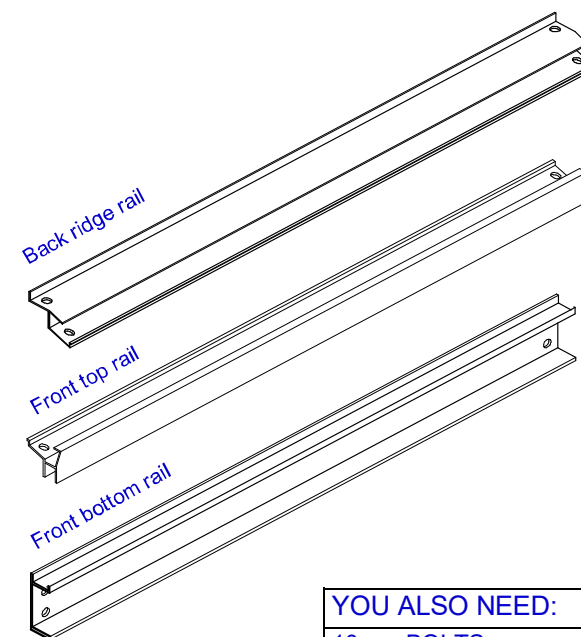


YOU ALSO NEED:	
10mm BOLTS	8
20mm BOLTS	2
NUTS	10
Located in pack: SCREW-H4	

1 Bolt on the rails in the order shown.

DO NOT FULLY TIGHTEN
BOLTS AT THIS STAGE

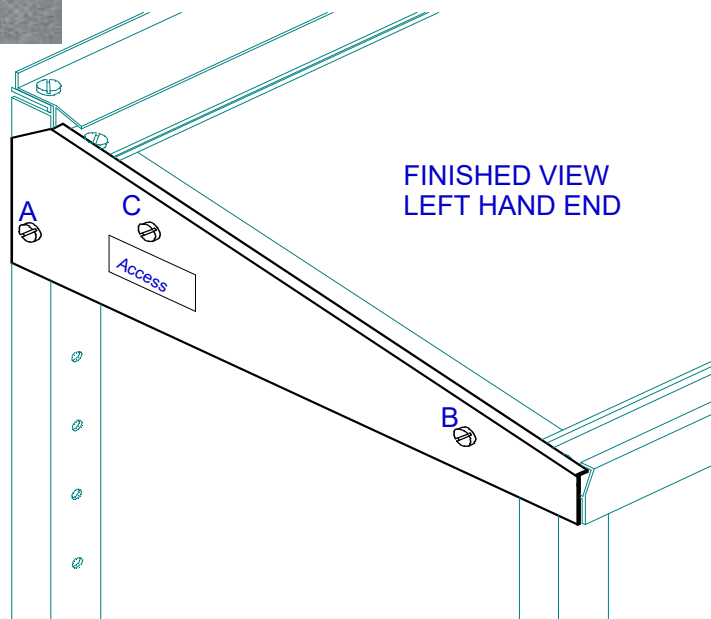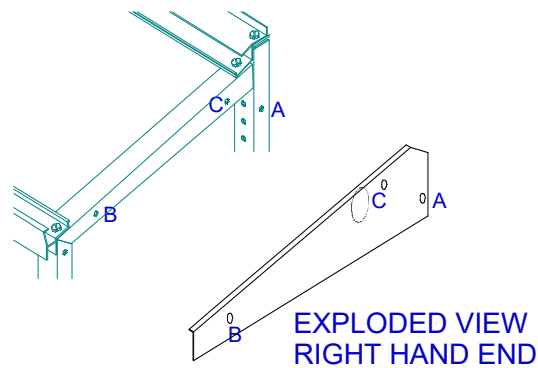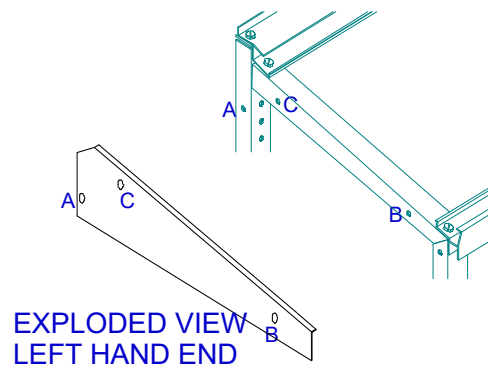

PARTS NEEDED FOR EACH END

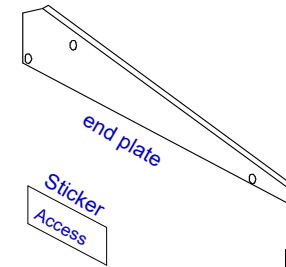


YOU ALSO NEED:	
10mm BOLTS	3
NUTS	3
3mm NYLON SPACER	2
BLACK GROMMET	1
Located in pack: SCREW-H4	


- 1 **Remove any plastic protective film** from the end plates and put 'Access' sticker on.
- 2 Bolts 'A' and 'B' go through the end plate THEN have a 3mm nylon spacer fitted BEFORE fitting to the frame.
- 3 Bolt 'C' only goes through the end plate and the frame.
- 4 Repeat for the other end.
- 5 One end plate will have a large hole in. Fit the black grommet into the hole.
plate.

DO NOT FULLY TIGHTEN
BOLTS AT THIS STAGE

END PLATES

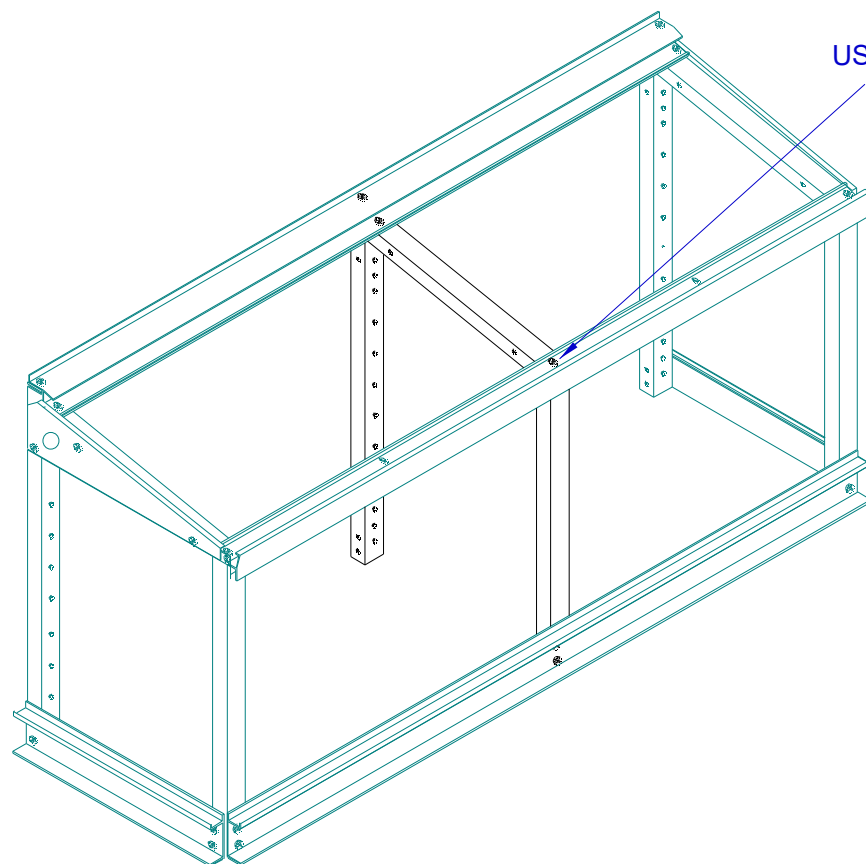


USE 20mm BOLT

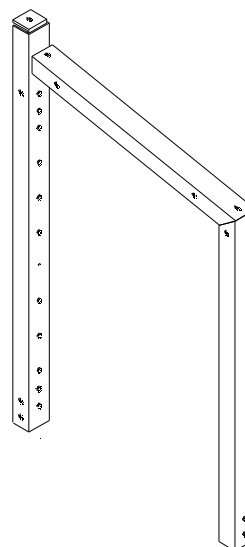

CENTRE LEGS
PRIOR TO FITTING

PARTS NEEDED

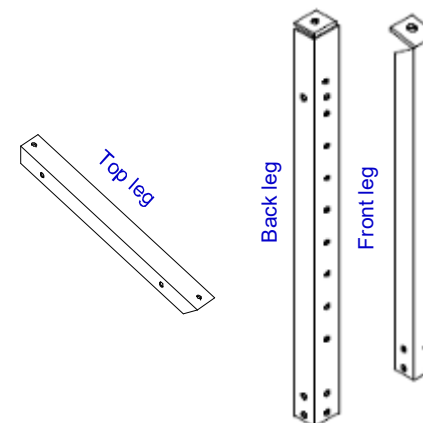

YOU ALSO NEED:	
10mm BOLTS	4
20mm BOLTS	1
NUTS	5
Located in pack: SCREW-H4	

1 Fit legs as shown into the frame.

DO NOT FULLY TIGHTEN
BOLTS AT THIS STAGE


1

SQUARING THE FRAME

Carefully use the squaring card to square the unit up as shown. Slacken the nuts if necessary to move the framework into a square position.

IT IS ESSENTIAL TO GET THE FRAME SQUARE.
DO NOT ALIGN TO THE WALL AS IT MAY NOT BE SQUARE .

If this nut turns while tightening, use a small pair of pliers to hold the

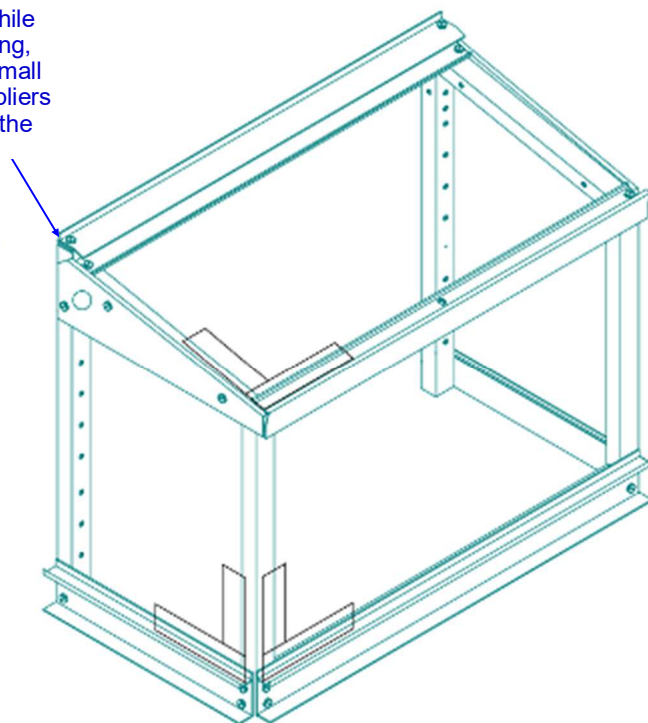

2

Once the frame is completely square fully tighten up all the nuts and bolts.

FULLY TIGHTEN ALL BOLTS EXCEPT THE END PLATE BOLTS, otherwise the framework will quickly work loose.

PERIODICALLY CHECK THE TIGHTNESS OF THE BOLTS

TIP: If your drill is touching the framework, just mark the holes, then remove the frame to allow the holes to be drilled.

**IF YOU HAVE A GROWHOUSE
NOW GO TO PAGE 8**

3


FIXING TO WALL

Two screws are used in each back leg (NOT SUPPLIED). We recommend 2" No. 8 or No. 10 woodscrews.

When fixing to a wall, rawplugs will be required

Counting from the floor the screws go in the holes marked 'F'.

2 & 11

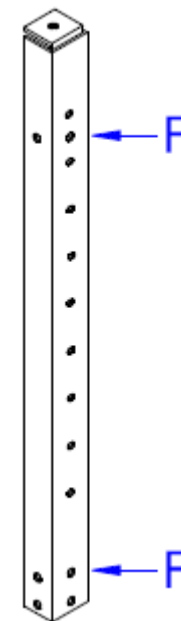


Back leg

**WEAR APPROPRIATE
SAFETY EQUIPMENT
WHEN DRILLING OR
HAMMERING**

TIP: Always treat timber with wood preservative before fixing in place


FLOOR FALLING AWAY

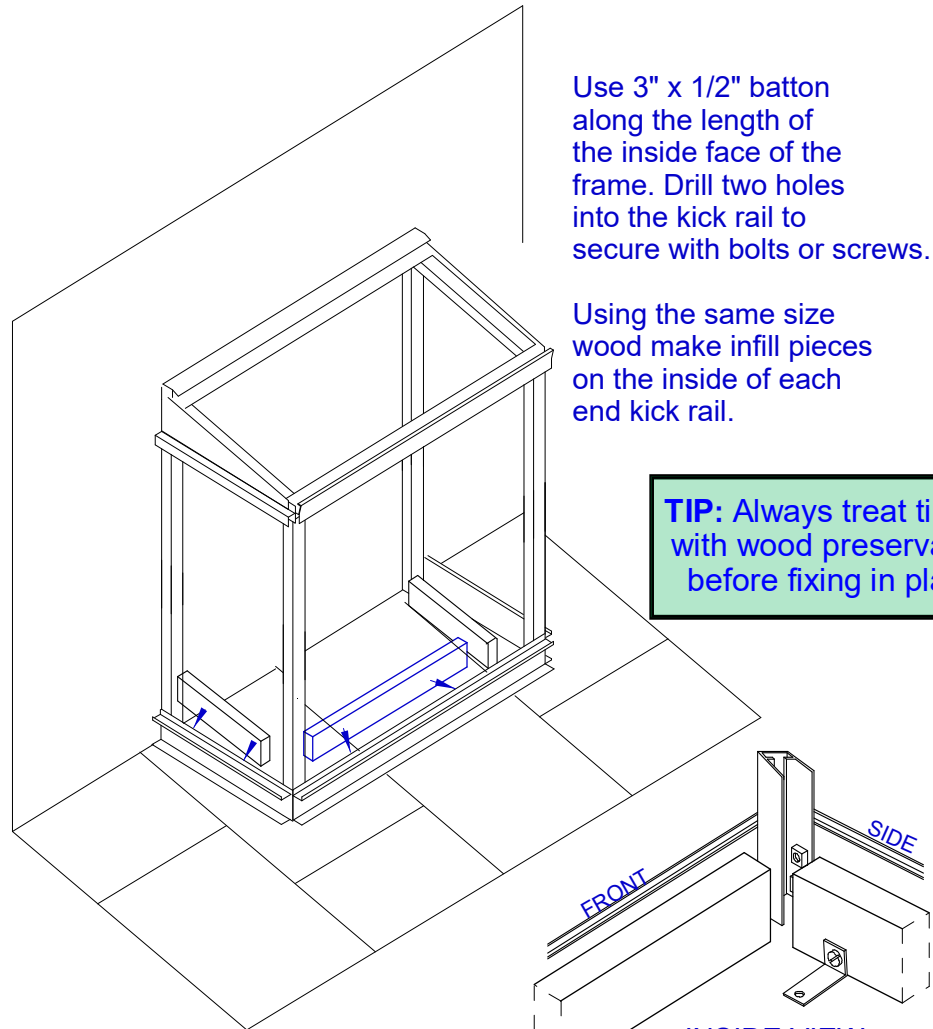

Use 3" x 1/2" batton along the length of the inside face of the frame. Drill two holes into the kick rail to secure with bolts or screws.

Using the same size wood make infill pieces on the inside of each end kick rail.

TIP: Always treat timber with wood preservative before fixing in place

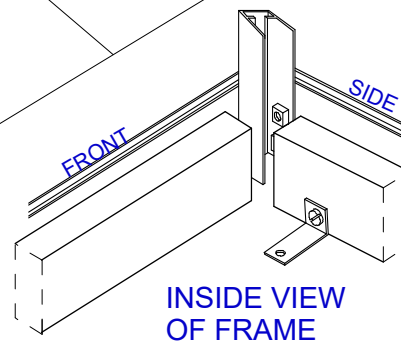


INSIDE VIEW OF FRAME

IF YOU HAVE A WALL FRAME MODEL NOW GO TO PAGE 11


ROUGH OR SLOPING WALL

To solve problems with walls choose option A or B below.


Fit the frame to the woodwork using 1.25" wood screws. (not supplied)
Seal around the inside of the frame with silicone sealant when finished.

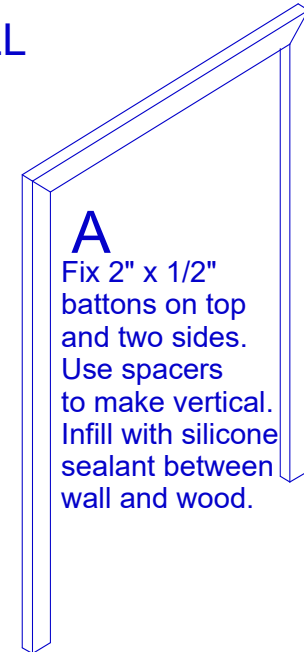

A
Fix 2" x 1/2" battons on top and two sides. Use spacers to make vertical. Infill with silicone sealant between wall and wood.

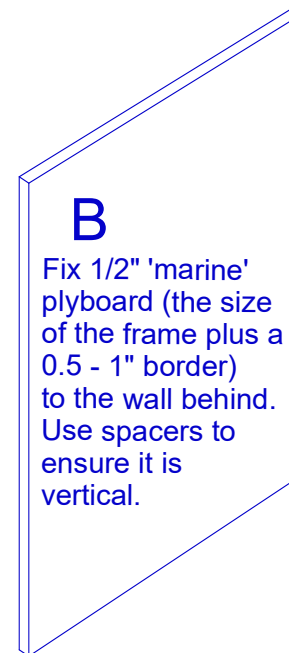


B
Fix 1/2" 'marine' plyboard (the size of the frame plus a 0.5 - 1" border) to the wall behind. Use spacers to ensure it is vertical.

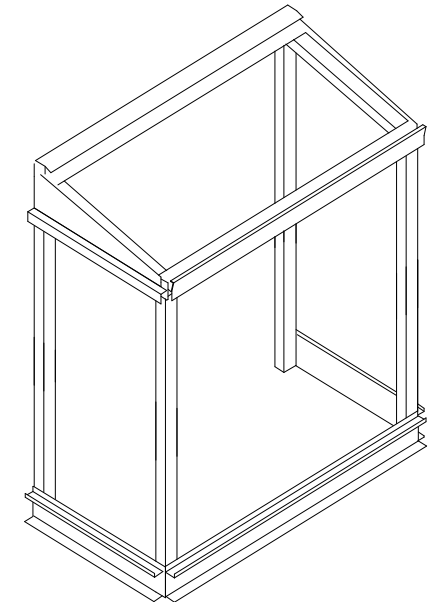


Screw or bolt 'L' shaped brackets to the wood and then to the floor

1

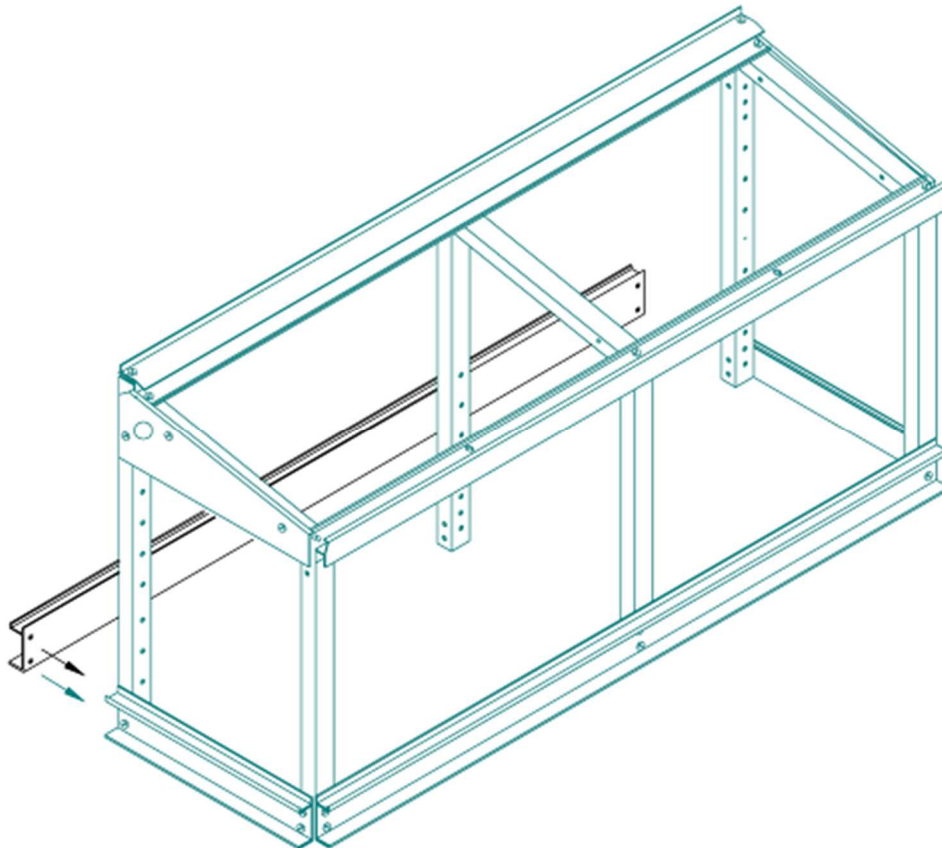

PARTS NEEDED

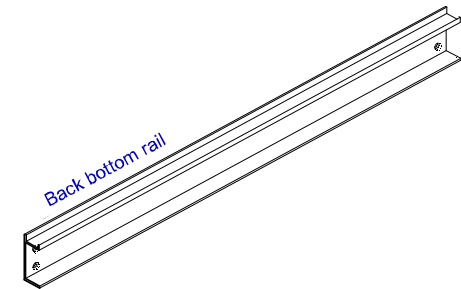

YOU ALSO NEED:

30mm BOLTS	6
NUTS	6
20mm NYLON SPACER	6
Located in pack: SCREW-H10	


1

Bolt on back bottom rail. Push long bolts through the back bottom rail then fit a 20mm nylon spacer BEFORE passing through the leg and fitting nuts on the inside of the frame.

FULLY TIGHTEN
BOTTOM RAIL BOLTS

1


Glass brackets must be fitted to both infill plates. **Remove the plastic protective film from both infill plates.** 10mm bolts 'E' go through the infill plate from the outside. Put a 3mm nylon spacer on each bolt before pushing on the glass bracket. Glass bracket is INSIDE frame and will clamp onto the glass once the glass is in place. Fit brackets onto both infill plates.

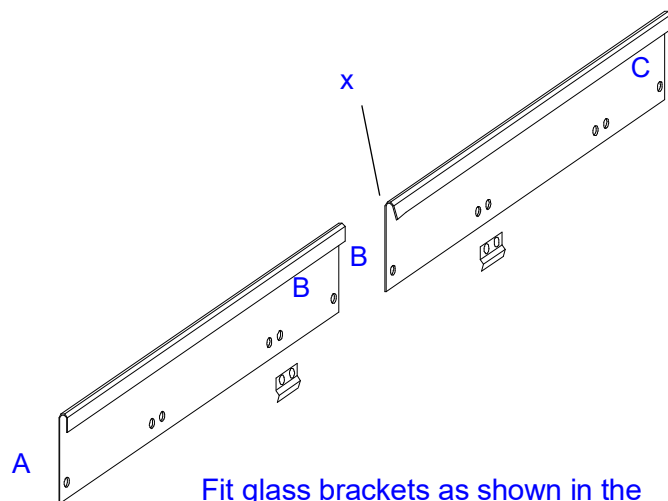

Fit glass brackets as shown in the diagram below. Note one infill plate will have a notch at one end.



Nylon spacers on infill plate

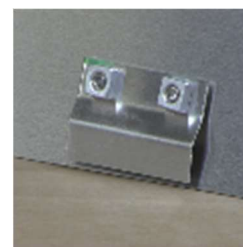

Completed bracket inside Growhouse




Nylon spacers on infill plate

2

Take the NOTCHED lipped section and push over the upstand on the back rail, it will cover half the length of the frame. Push a 30mm bolt through hole 'A', then fit a 3mm long and a 20mm nylon spacer. Push the bolt into the frame and fit a nut and fit a nut on the inside of the frame. Take the second infill plate and place it over the upstand on the back rail, overlapping the first plate so holes 'B' align. Bolt through 'B' (rear centre leg) and 'C' remembering to add both spacers. **Do not overtighten these bolts.**


PARTS NEEDED

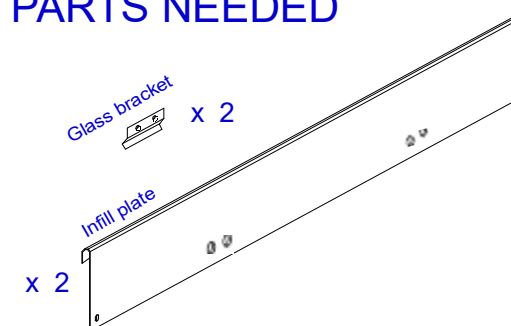

YOU ALSO NEED:

10mm BOLTS	4
30mm BOLTS	3
NUTS	7
20mm NYLON SPACER	3
3mm NYLON SPACER	7
Located in pack: SCREW-H10	

2

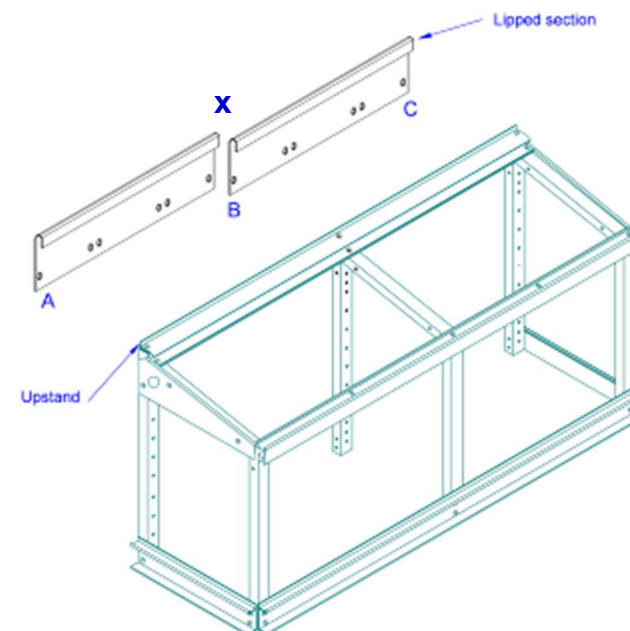

1

FIXING TO FLOOR (OPTIONAL KIT)

Fit the 'L' brackets to the front legs using a nut and bolt.

Turn the framework upside down and fit the 'L' brackets to the back legs using a nut and bolt.

PARTS NEEDED

Ground Fixing Pack FR-AKG
(Optional)



2

Place the framework in its final position and drill through the bracket with a 6mm masonry drill bit, to a depth of 35mm. Insert the red rawlplug, through the bracket and into the concrete.


Using a woodscrew, screw through the 'L' bracket and into the rawlplug.

Repeat for other brackets.

WEAR APPROPRIATE
SAFETY EQUIPMENT
WHEN DRILLING OR
HAMMERING

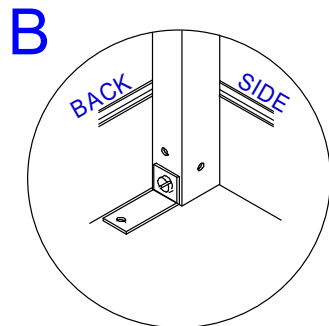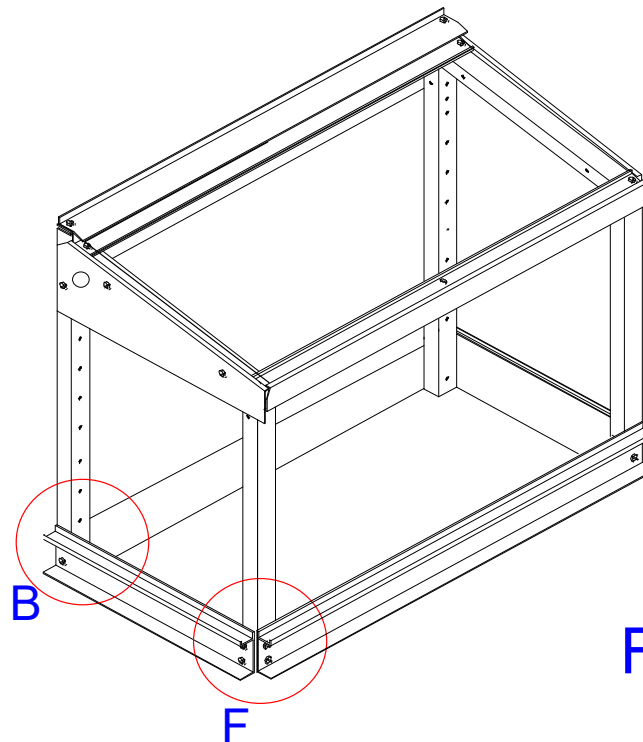

INSIDE VIEW OF BACK
LEG SHOWING FIXING

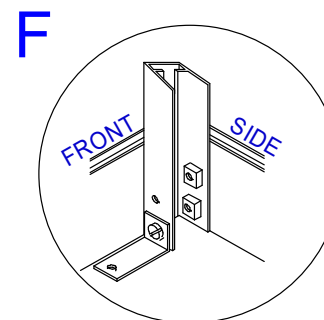

INSIDE VIEW OF FRONT
LEG SHOWING FIXING



Completed front bracket



GROUND FIXING KIT IS
RECOMMENDED IN WINDY
AREAS.

Models have 2 standard + 2 wide shelves.


- 1 Lightly tap rawplugs into both ends of the tubular aluminium shelf rods with a hammer.
- 2 Slide the two hooks onto the tube, as shown then screw the support bracket on at each end.
- 3 Fit the other rods to the shelf.

NEW 5-hole strap

Fit the rods to the holes 'F'

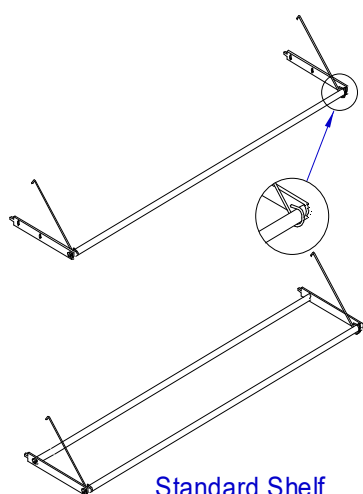

Standard Shelf

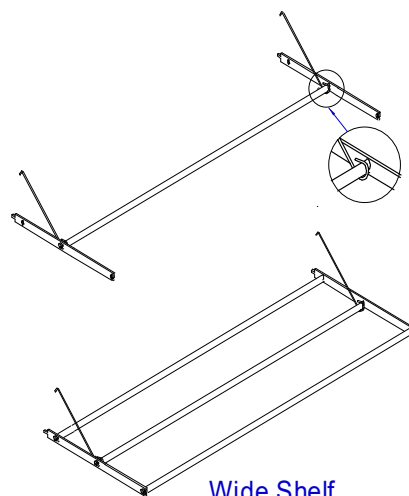

Wide Shelf

Note: A Pozidrive screwdriver will fit the screws best

FITTING





Hook support wire into top hole, then swing shelf upward into the adjacent hole below.


PARTS NEEDED per shelf

YOU ALSO NEED PER SHELF ROD:

RAWPLUGS	2
1" WOOD SCREW	2
Located in packs: S-V	

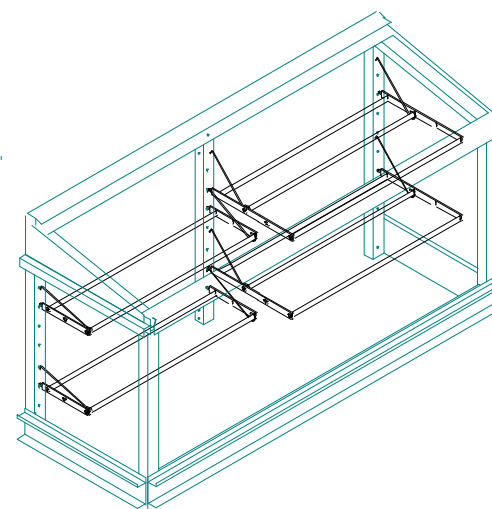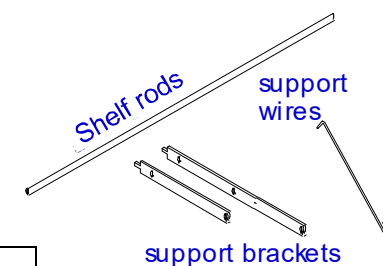

HALF LENGTH SHELF FITTING

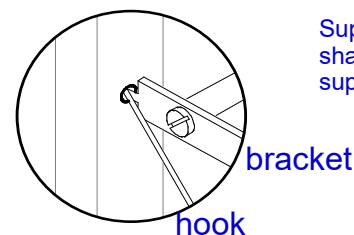

Support wires can share same hole as support bracket


When the shelves are not needed they can either be removed or they can be unhooked from the lower fixing hole and hung flat against the back using the wires.



Bottom shelf hung flat against the back

FITTING THE CHANNEL LINER


TIP: Before sticking the tape, clean the aluminium of any oil traces to promote adhesion.

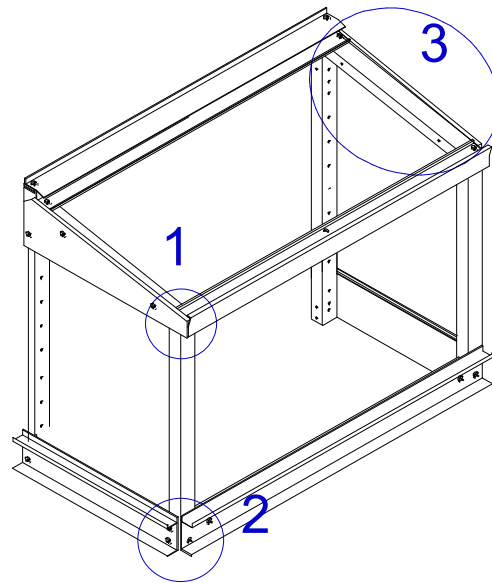

1

The black 16mm channel liner (W66-2M) fits on the inside vertical face of top FRONT rail only. This is a loose fit so strips of double sided tape are included to secure it until the glass is in place.


TIP: Do not use the red covered sticky pads that are for the handles

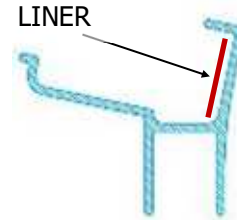

2

The black 12mm channel liner (W65-5M) goes in the FRONT bottom rail only. Using the strips of double sided tape press liner down so that it **LIES FLAT** at the bottom of the channel - trim with a knife if necessary.

THE DOORS WILL NOT SLIDE PROPERLY IF THE LINER IS NOT FLAT

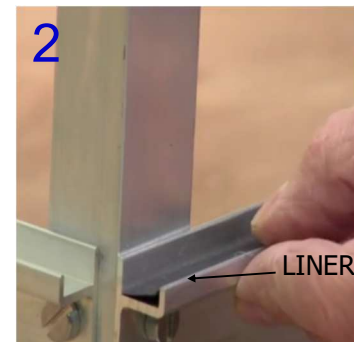

Removing the tape

Peel the **narrower** backing tape off first, this will expose the sticky pad, allowing it to be stuck onto the liner.




Tip: Bend the backing tape back on itself to make it easier to peel the sticky pad off.

Place pads regularly down the length of the liner.

When ready, peel the **wide** backing pads off the tape and stick the liner to the aluminium.



To make the top glass slide more easily, rub candle wax onto the glass bearers. Also wax the black 12mm and 16mm channel liners.

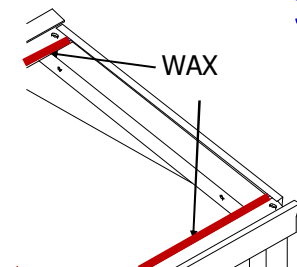

3

FITTING THE LINER

On the next page are instructions on how to fit the handles to the glass

When fitting the handles, place the glass on a table or timber battens. **NEVER PLACE THE GLASS DIRECTLY ON CONCRETE OR SLABS**

Always fit the handles to the left hand side of the glass sheet

DO NOT lift the glass by the handle

If possible, leave the handles overnight in a warm place to promote the curing of the adhesive

TIP: Always grip the handle in the **CENTRE** when sliding

WARNING


If broken, toughened glass will fragment safely.

If the edges are knocked or chipped the glass will spontaneously fragment. This is a natural occurrence due to the toughening process. Care should be taken when moving or cleaning, not to damage the edge of the glass.

When placing the glass in the frame, ensure that the glass is securely placed in the runners before letting go of the glass.

GLASS	SW3	SB3
610mm x 610mm	8	11
Sheets requiring handles	6	6

1

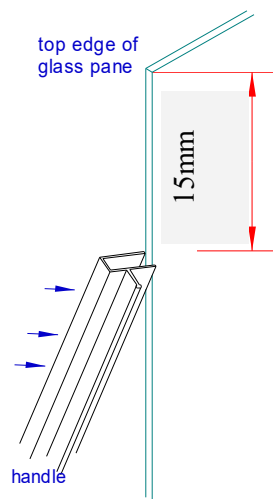


First wipe the edge of the glass where the handle will fit with a wet cloth.

Then slide the handle over the edge of the glass, starting at the top corner of the handle.

Place the handle 15mm from the top edge of the glass

TIP: Do not try and slide the handle on from the top or bottom

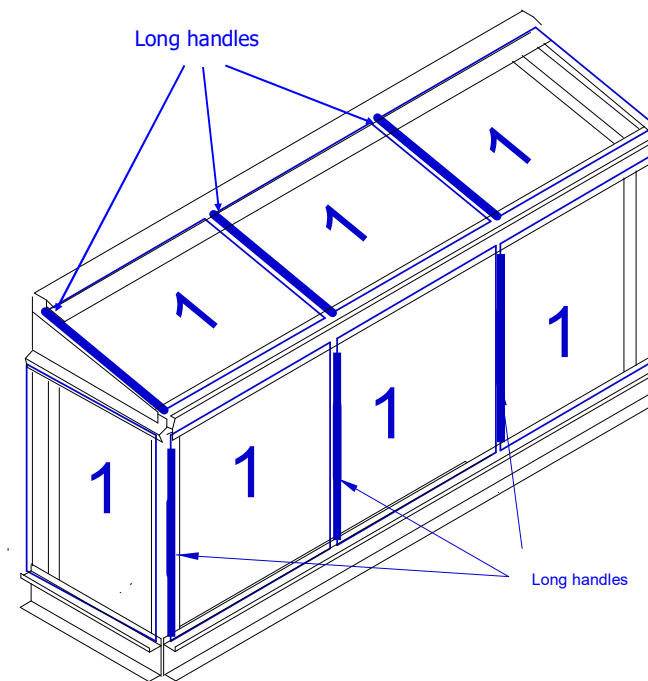

End glass has no handles



1

Ideally work on a table or a workbench.

It is best the work inside to keep the pads warm and dry.



2

Mark the glass 15mm from the top edge for sheets.



3

Open the sachet and wipe the glass where the tape will stick.



4

Replace the cloth in the plastic bag to prevent evaporation.



5

Peel the pad off the backing.

Each handle has 2 pads (top and bottom of handle).



6

Press the pad down firmly to ensure good adhesion to the glass.



7

Peel the cover strips off all of the pads.



8

Using the pen mark as a guide, fit the handle.

Slide the two arms of the 'U' over the edge of the glass.



9

Work the handle on with your hands.



10

Use one of the glass battens to gently tap the handle down.



11

Work the handle on all the way down the glass.

Use the timber batten if necessary.



12

Use the timber to make sure the handle is flat.

Leave overnight in the warm to fully cure the adhesive.

HOW TO FIT THE HANDLES AND PADS

FITTING HANDLES

Fit the handles to the glass before fitting into the frame. Ensure the handles are always on the left hand side of the glass.

FITTING THE GLASS (FRONT AND TOP)


To fit the glass push the sheet into the deeper top channel, then lower into the bottom channel (C). Make sure the glass is firmly in the bottom channel before letting go. Always start glazing at the left hand end and overlap each subsequent pane by 1" (2cm).

END GLASS


Slacken the two lower end plate bolts then gently slide the glass into place from the front corner. The glass is held between the framework and the end plate (A). The bolts on the end plates can then be gently tightened. Fit a ring wedge (D) into the bottom glass channel.

BACK GLASS –GROWHOUSE ONLY

Slacken the four end plates bolts and gently slide the first sheet in from the rear corner. Gently slide the other sheet in from the other end. The two sheets will overlap in the centre, behind the glass bracket (B). Carefully retighten the bolts. Fit a ring wedge (D) into the bottom glass channel - 1 per

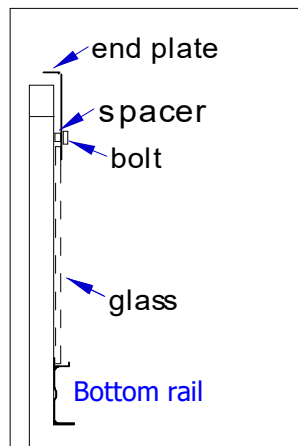

A. End glass detail

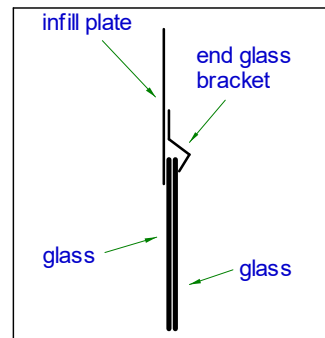

B. Back glass overlap detail



B. Glass bracket



C. Fitting the glass



D. Ring wedge
(Located in pack: SCREW-H4/SCREW-H10)

GLASS STICKS TOGETHER	This is normally due to the handles not being put on the correct side of the glass. See page 13 for details of where the handles should be fitted to the glass.
HANDLES COME OFF	If handles come off frequently either purchase some new handles and sticky pads from Access or use a glue such as 'liquid nails' or 'no more nails' to permanently glue the handles to the glass.
SHELVES WILL NOT FIT INTO THE BACK LEGS	Check that the back legs have been fitted the right way round - see page 2. Check that dimension A = B - see page 6.
FRAMEWORK MOVES AND GLASS FALLS OUT	If the nuts and bolts haven't been properly tightened, the framework will quickly become loose and move, even in light winds. In strong winds the glass will fall out. Remove the glass, re-square the frame, then fully tighten all of the nuts and bolts with a large, flat bladed screwdriver.

PERIODIC MAINTENANCE Every Spring take the glass out of the greenhouse and wash glass and framework with warm soapy water. When inserting the glass, always check that the glass is properly seated in its top and bottom channels before letting go of the sheet.

CHECK THE TIGHTNESS of all bolts regularly, especially in very windy areas or powder coated frames.

CROP ROTATION Suggestions for suitable crops and sowing dates given in the free Access Growing Guide

VENTILATION In cold weather gentle ventilation can be given by sliding the front sheets of glass to give 2-3" (5-8cm) gap at each corner.

In warmer weather allow a gap on the top sheets as well. In very hot weather open all the sheets of glass. To ensure that the correct temperature is maintained use a thermometer inside the greenhouse. You can completely remove the top sheets in summer.

GALES The greenhouse must be kept fully closed in rough weather.

GLASS CHANNELS Ensure that this is kept free from debris and allows the glass to slide smoothly. Periodically lubricate the running edge of the glass with a wax candle.

SNOW If snow is very heavy - avoid letting it build up on the roof

SHELVING Stand pot plants on saucers, or use optional shelf covers which incorporate a layer of capillary matting to absorb excess water when watering. Alternatively, stand the pots in empty seed trays.

SITING Site on the sunniest place available. Anything from East through South to West is suitable. If it has to face North, don't despair, it will be warmer in than outside! If you can fix to a brick or stone wall, you will get extra heat storage during the day.

REDUCING THE LENGTH If it is just too long for your ideal spot, it can be shortened. Re-drill the holes at one end of the rails - moving them in by the amount you need to remove. Hacksaw off the surplus aluminium and shorten the shelf rods. The glass will merely overlap more - don't try to cut toughened glass!